

Products Care & Maintenance



CANVAS / TEXTILES

- / Regularly dust with a soft brush or vacuum to prevent dirt accumulation.
- / Treat stains on the canvas promptly to prevent them from setting. Absorb excess liquid immediately.
- / Use antibacterial wipes or sprays to disinfect, always following the manufacturer's instructions.
- / Machine washing is applicable only for the detachable Supersonic Canvas. Remove the canvas carefully using the AKUART hand tag. The Canvas is washable at temperatures up to 60°C. Ensure it is completely dry before remounting.

ALUMINIUM FRAMES

- / Regularly clean with a soft brush or vacuum to prevent dirt from accumulating.
- / Disinfect using antibacterial wipes or sprays, ensuring you follow the manufacturer's instructions.

WOODEN FRAMES

- / Regularly clean using a soft brush or vacuum to prevent the build-up of dirt.

WRITING BOARDS

- / Regularly clean using a soft brush or vacuum to prevent dirt build-up.
- / Steam Cleaning: Ensure you follow the appropriate instructions and safety guidelines.
- / Disinfect with antibacterial wipes or sprays, always adhering to the manufacturer's instructions.



