



# SS50 Vertical Suspended Screen

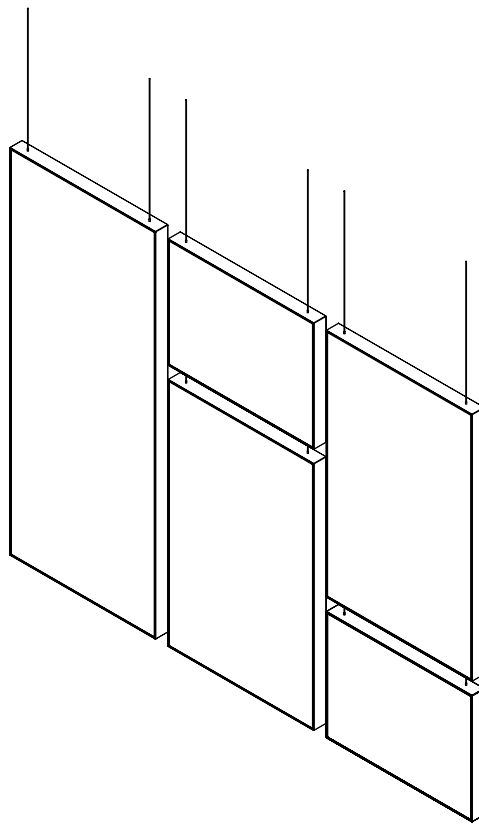


Installation manual for wire suspended screens

## 1 COMPONENTS (included)

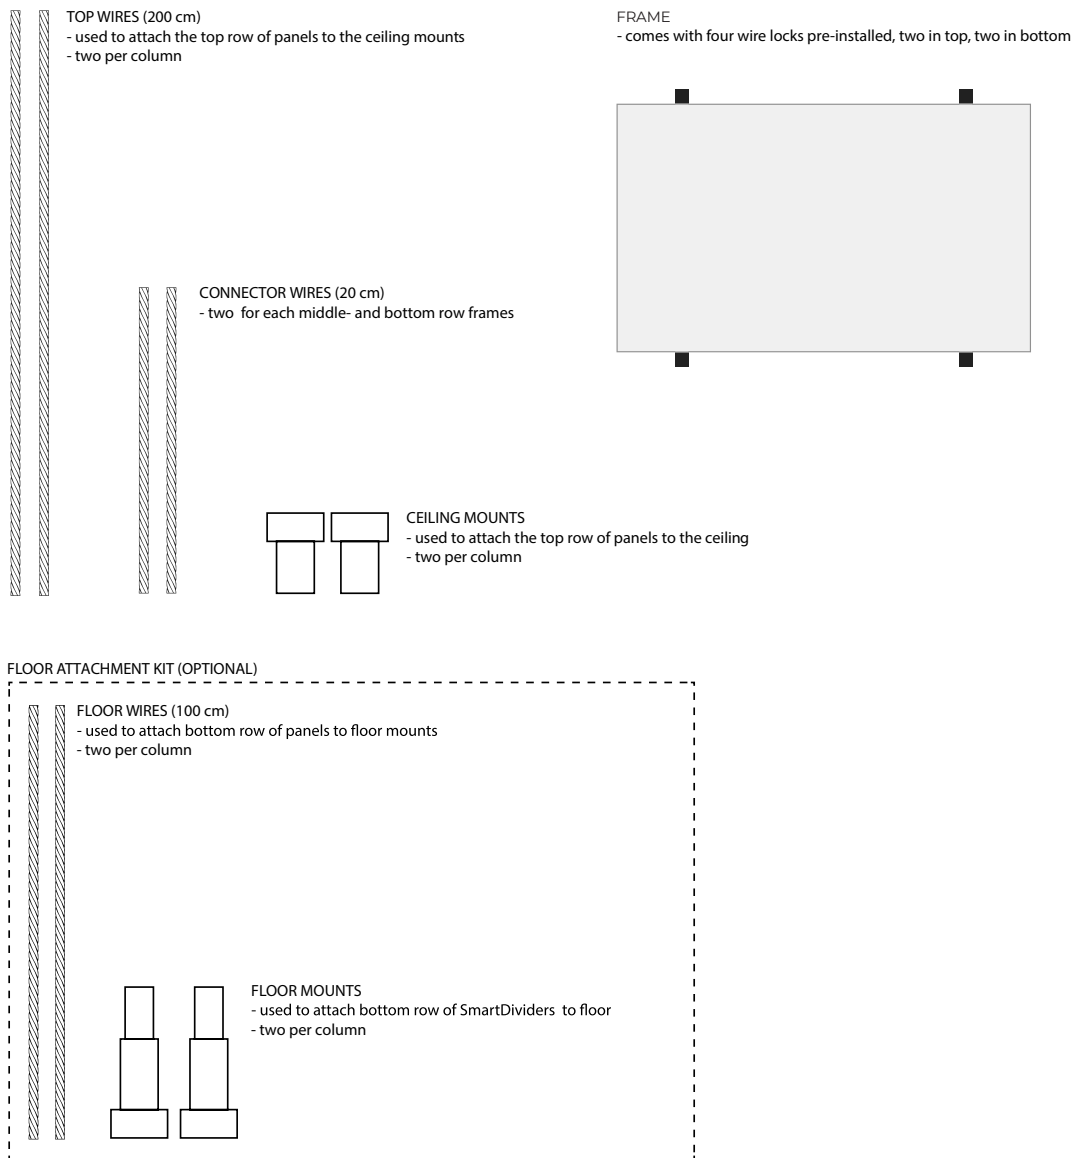


## 2 TOOLS NEEDED (not included)

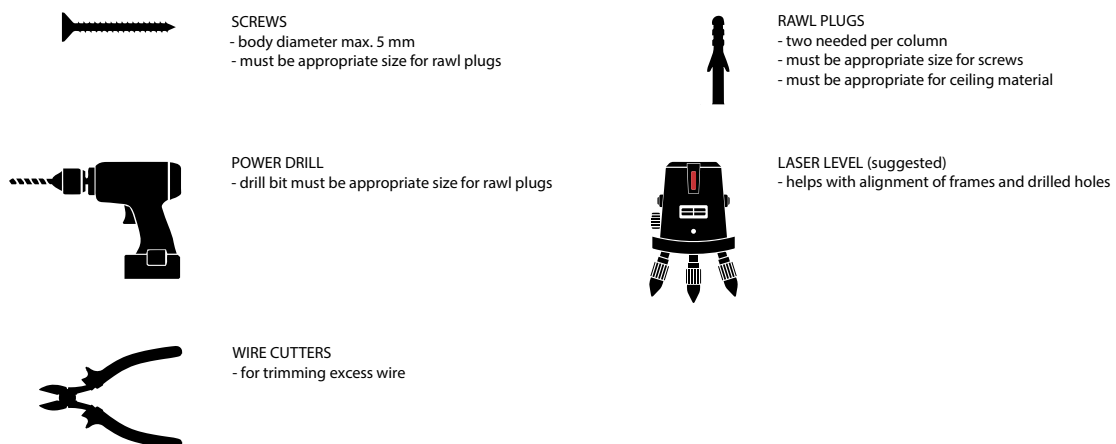

### 3 ASSEMBLY - TOP WIRES + CEILING MOUNTS\*

\* For suspended acoustic ceilings, see page 5

- For each top wire supplied, attach the ceiling mount as illustrated below.

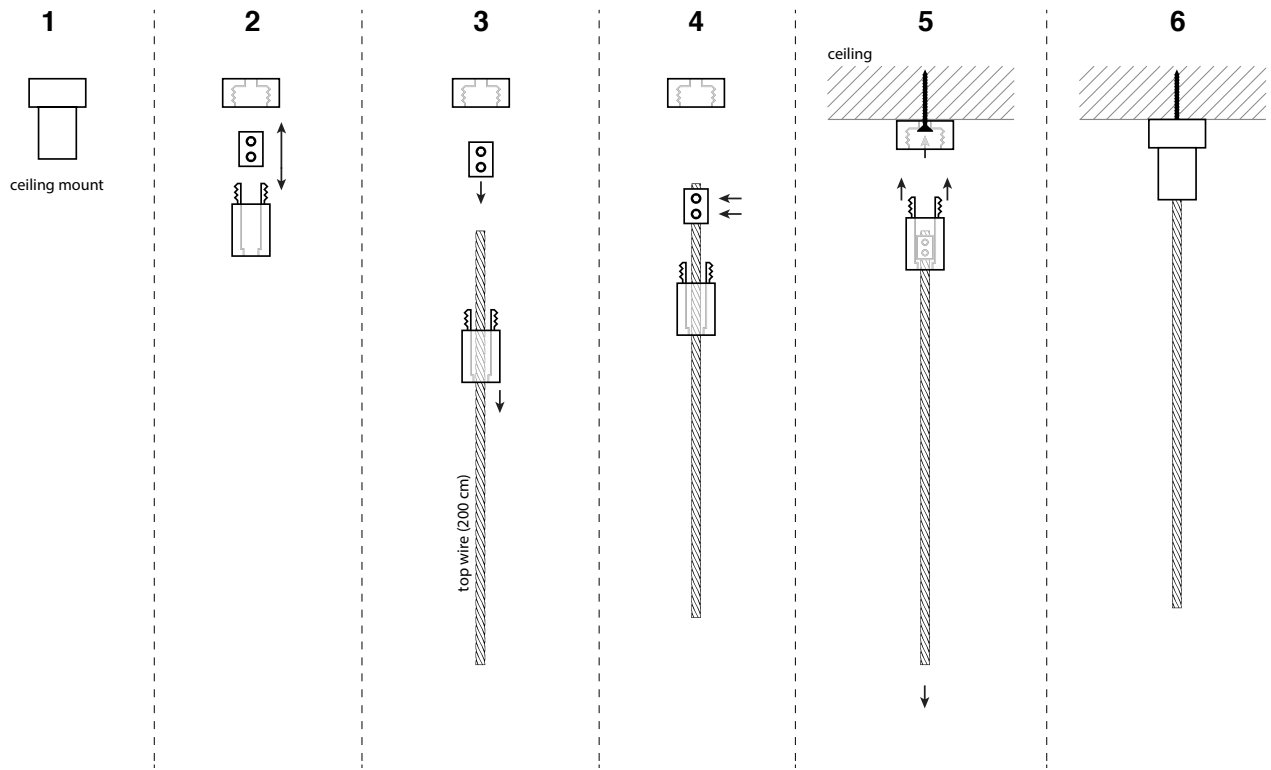

### 4 INSTALLATION - TOP WIRES

A) Drill holes in ceiling, add rawl plugs.

B) For each row of suspended panels, the distance between the two holes is 50 cm

C) The distance between the last hole for a given row and the first hole of the next row is 15 cm.


D) Screw ceiling mounts with attached top wires into holes in ceiling.

E) The distance between two rows of suspended panels is 5 cm

F) Insert the ends of the top wires into the wire locks on the panels. Depress the wire lock to release the wire again.


G) The top wires can be trimmed to the desired length from ceiling to the top of the panels, plus an additional 5 cm, using wire cutters.

Do this before inserting the wires into the wire locks.

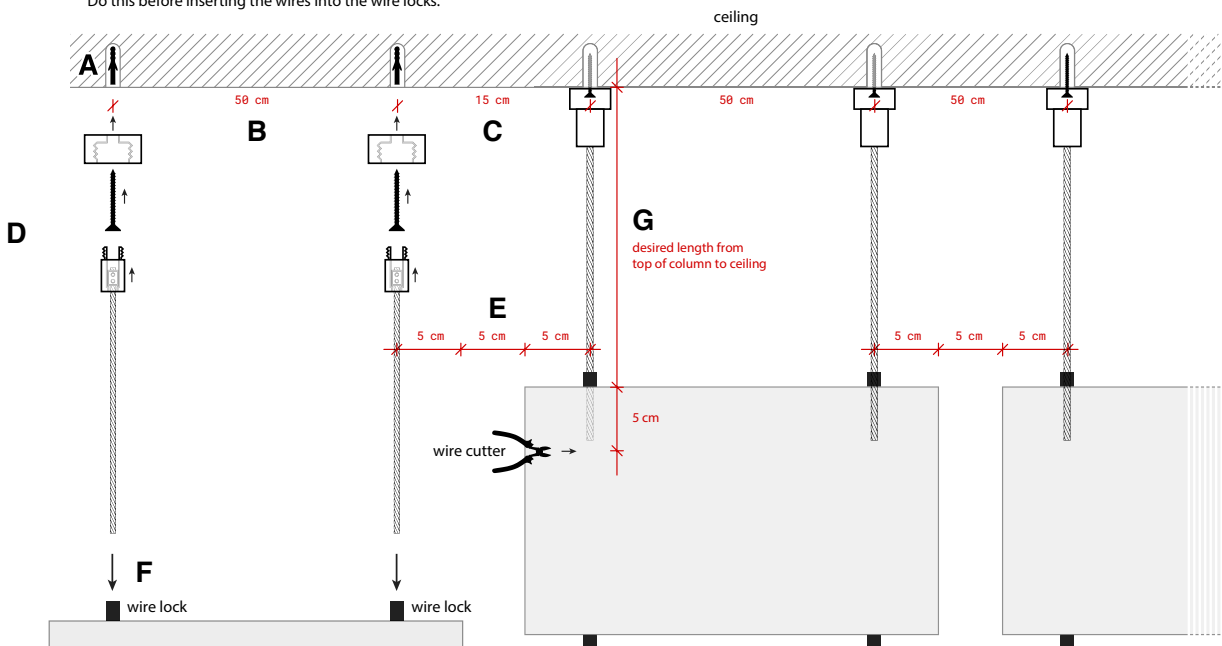

## 5 INSTALLATION - ADDITIONAL ROWS

- A) Use the short connector wires to connect each row to the next as needed.  
 B) The distance between each row of suspended screens is, the same as the distance between each column.  
 C) To adjust the distance between two suspended screens, either push the wire further into the wire lock, or depress the wire lock until it releases the wire.  
 D) Optional: use a laser level to align the columns and rows.

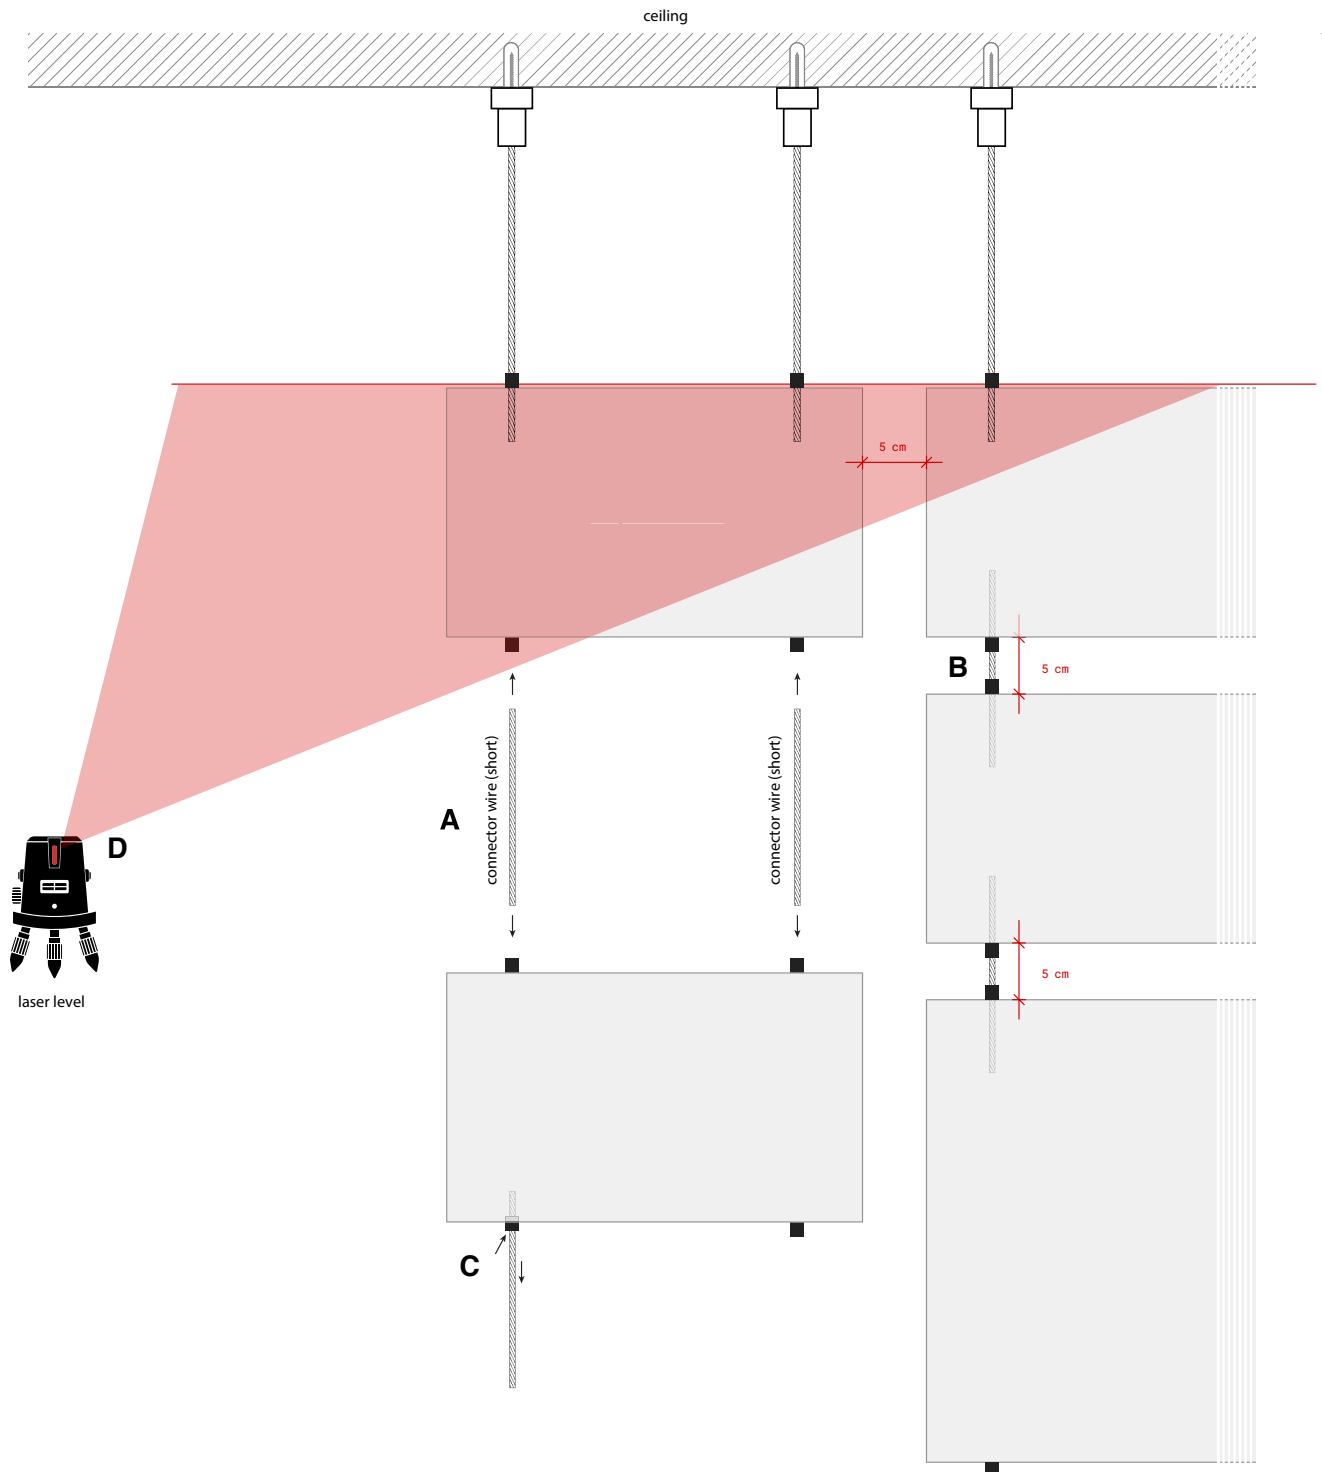

\* FOR SUSPENDED ACOUSTIC CEILINGS - ASSEMBLY: TOP WIRES + CEILING MOUNTS

ADDITIONAL PARTS

PLASTIC GROMMETS

- allows to pass the wire through the acoustic ceiling
- one per wire

