



Installation manual

In Your Room

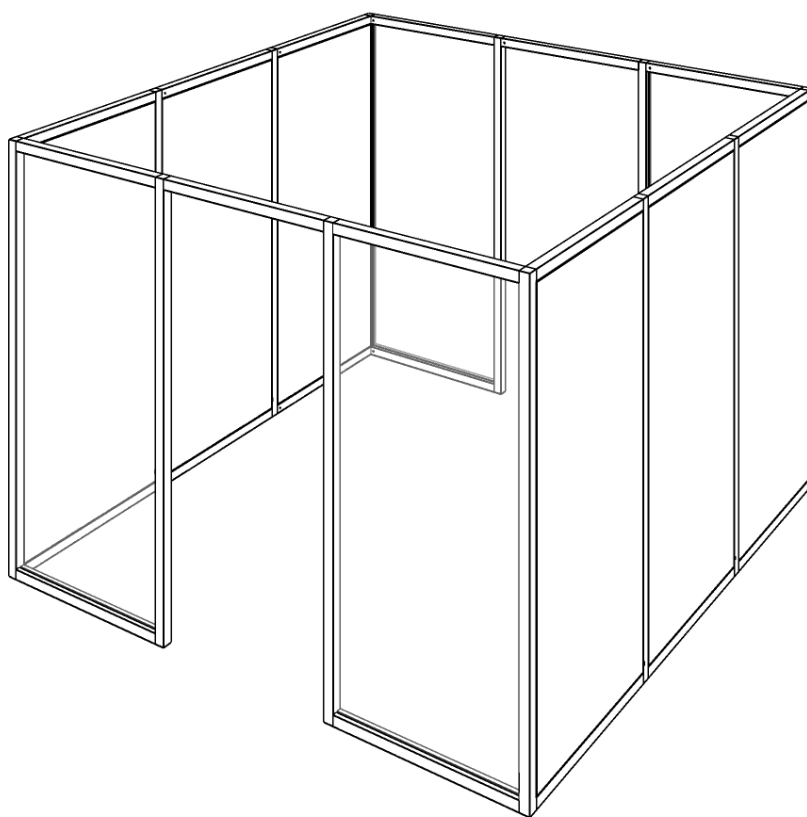

PARTS




Acoustic module




Glass module



End post



Door bar
(horizontal)

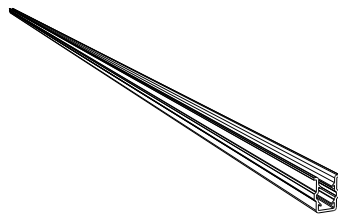


Glass list




Central fastener
(CF)

TOOLS

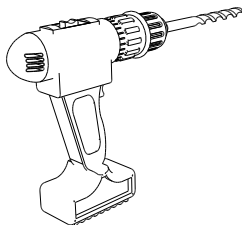

Power drill w.
Ø9 drill

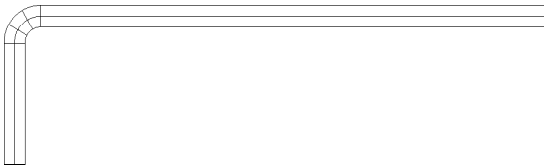

Allen key

AKUART

Safety measures, be careful as aluminium can be sharp

How to start and planning the installation; Map up your sequence 1-X


Start with all C- sections mounting, when in place connect them with door bars (connectors)

Start in a corner, always position each section where it belongs before removing lip partly or fully (to avoid mistakes), en with an end post.

Prepare The In Your Room configuration such that you have an overview of the final configuration.

See example below. Start creating angles, end with door bars.


The installation manuel goes trthrough the principles in the right order. The final configuration is mounted according to the configuration.

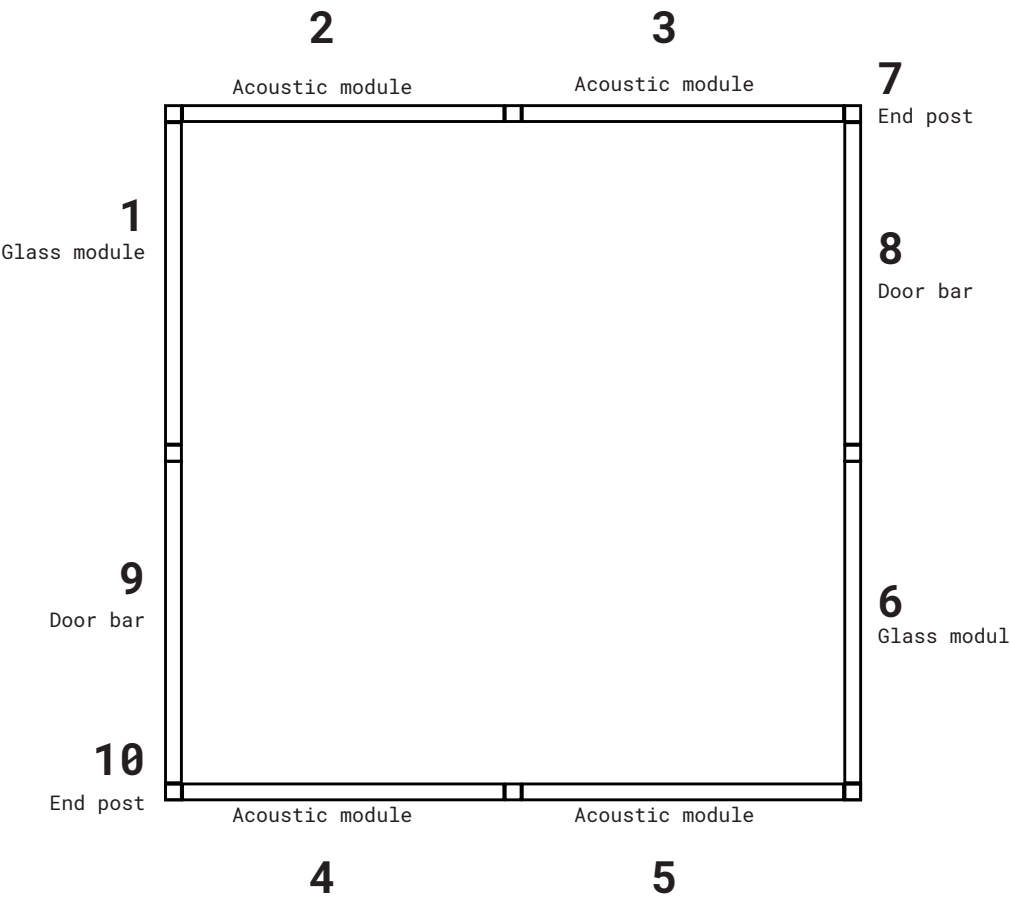


AKUART

The In Your Room configuration consists of modules. The modules can either be receiving og mounting. The receiving module will be adapted to fit the mounting part. The mounting part can eiter be: absorber, glass or a door bar. These will be handed differently.


The receiving module can be placed respectivly to the mounting part in follow-
ing ways.




Drill straight

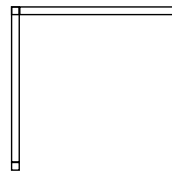


Drill angled right

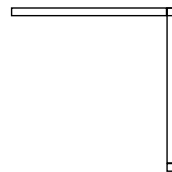

Drill angled left

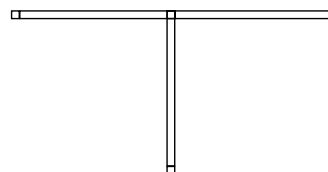


Drill angled left + angled right

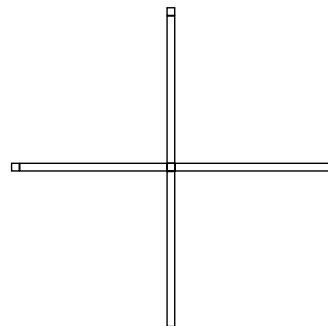


Drill angled left + angled right +
straight

PREPARE RECEIVING PART:

ACOUSTIC MODULES AND DOOR BAR

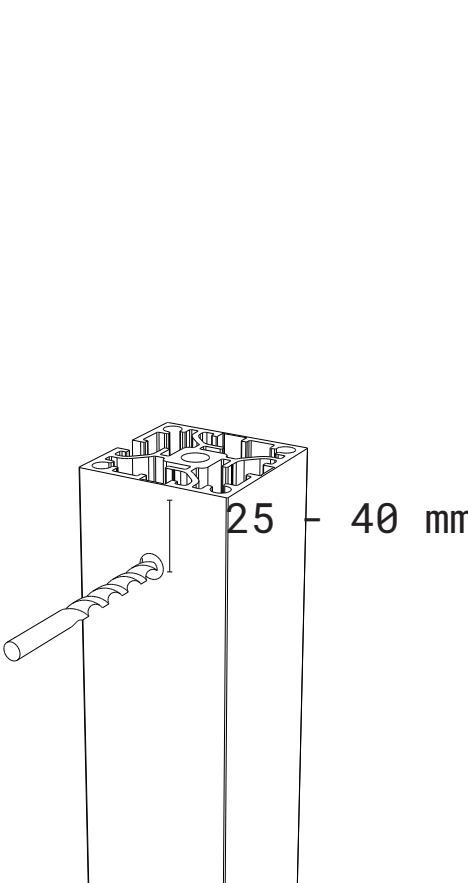


Drill Ø9

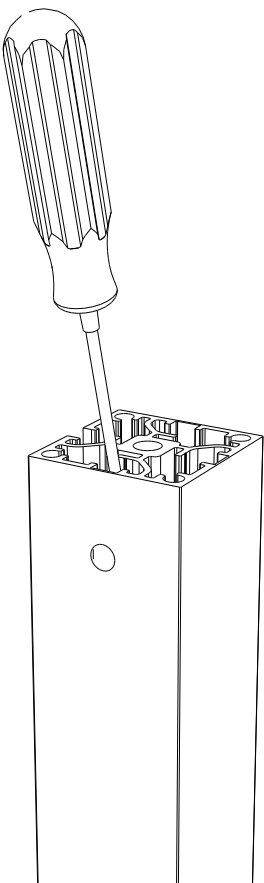

Remove lip with screwdriver


CF INSTALLATION

After preparing receiving part. Install the central fasteners.

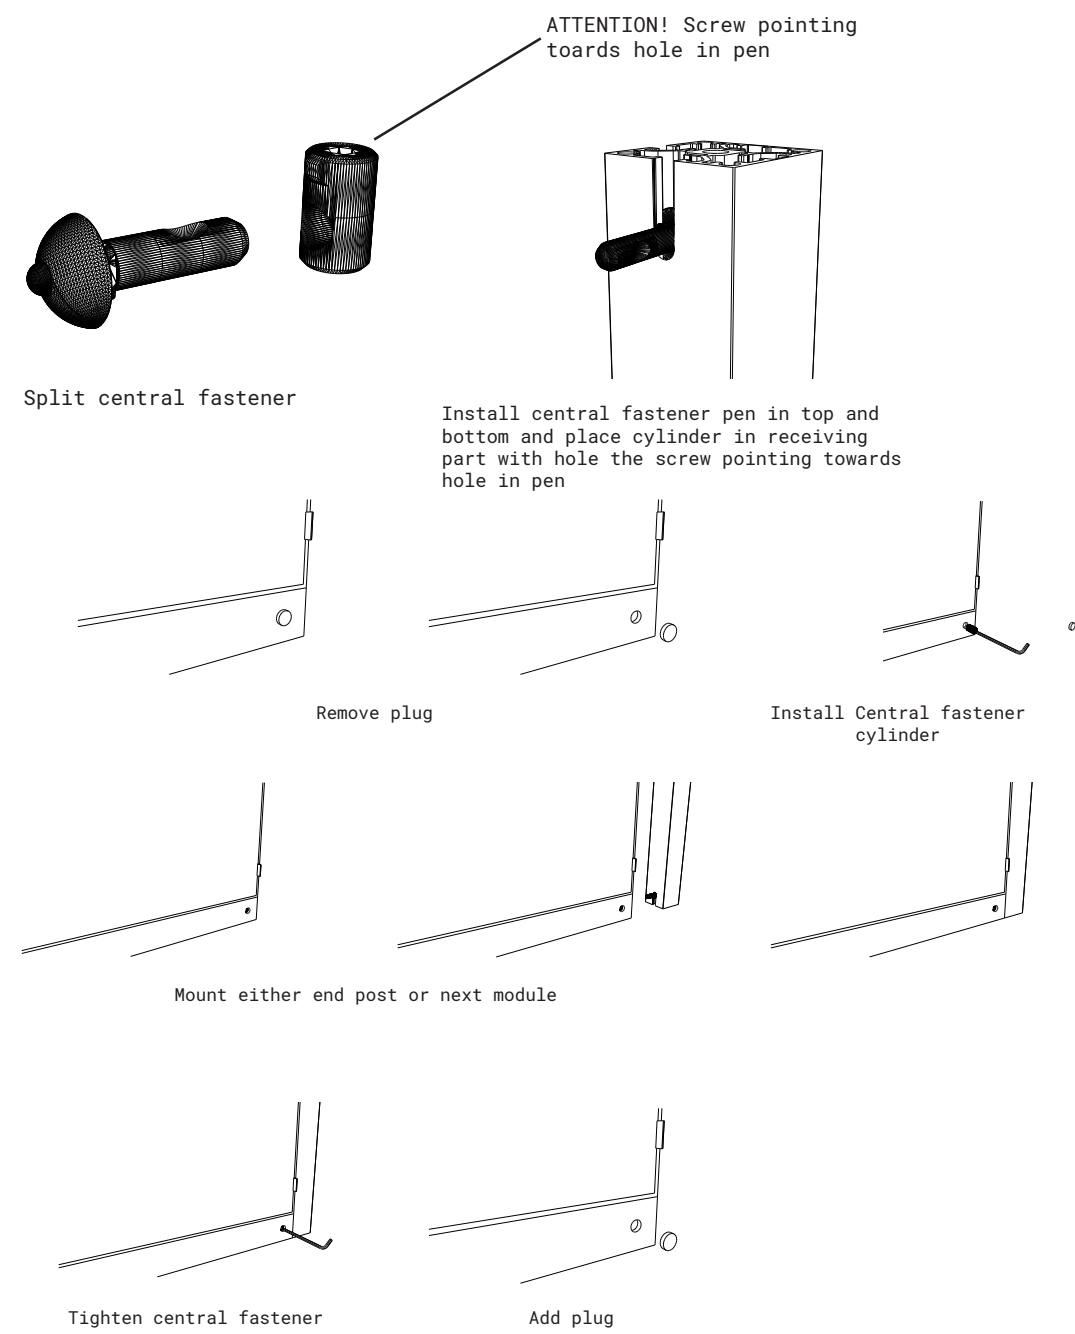

MOUNTING MODULE: ABSORBER


When the absorber is the mounting module. The receiving part is prepared in the top and bottom part. See: *CF - prep (page 5).

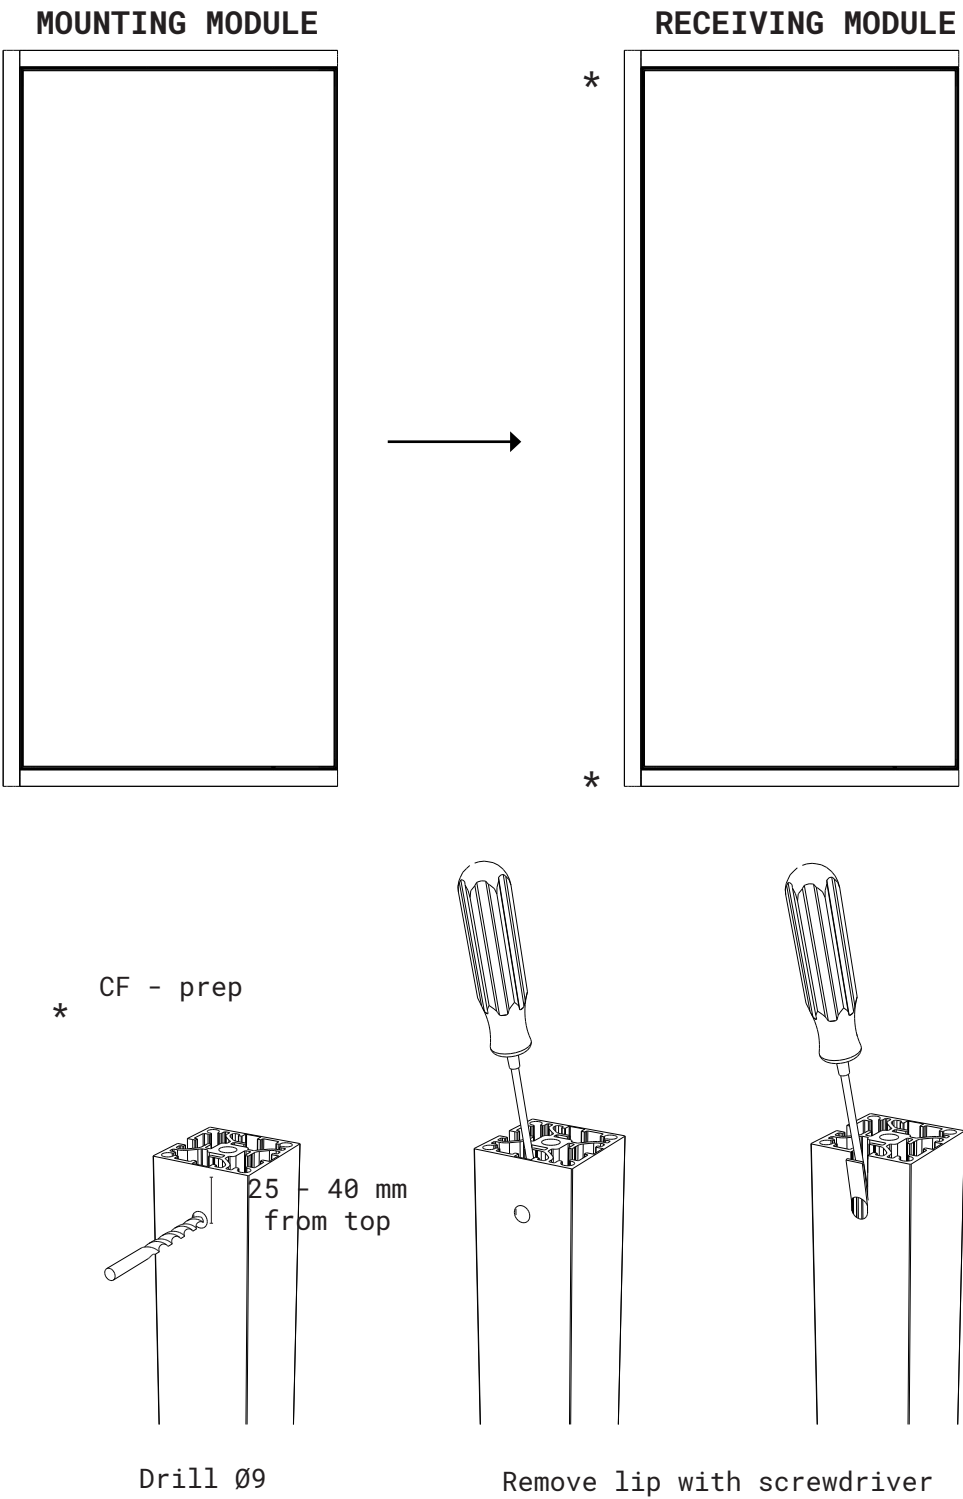


PREPARE RECEIVING PART:

GLASS MODULE


When preparing for glass. The lip of the receiving part should be removed all the way. After this attach the central faster in distance: 25mm from the edge of the receiving profile.

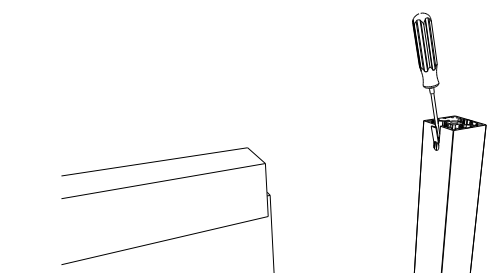

Open lip

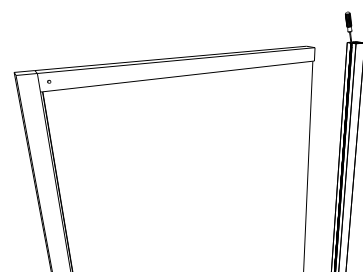

Remove all the way

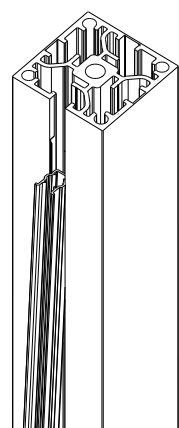

50 mm from
top


Insert plastic glass profile. You insert glass list by clicking in the list. Starting by clicking it in from 50 mm from the top. And ending it 50 mm from the bottom.

AKUART

MOUNTING MODULE: GLASS


For ease use soap water on receiving module

MOUNTING MODULE



Glass module

RECEIVING MODULE

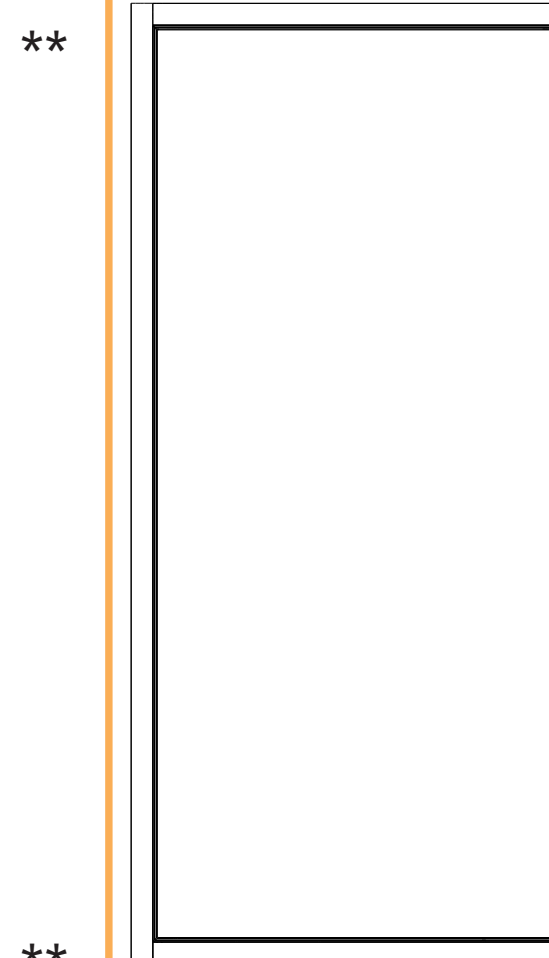


**

Receiving module


AKUART

EMPTY MODULE

The empty module consists of two door bars and one end post. One at the top and one at the bottom.

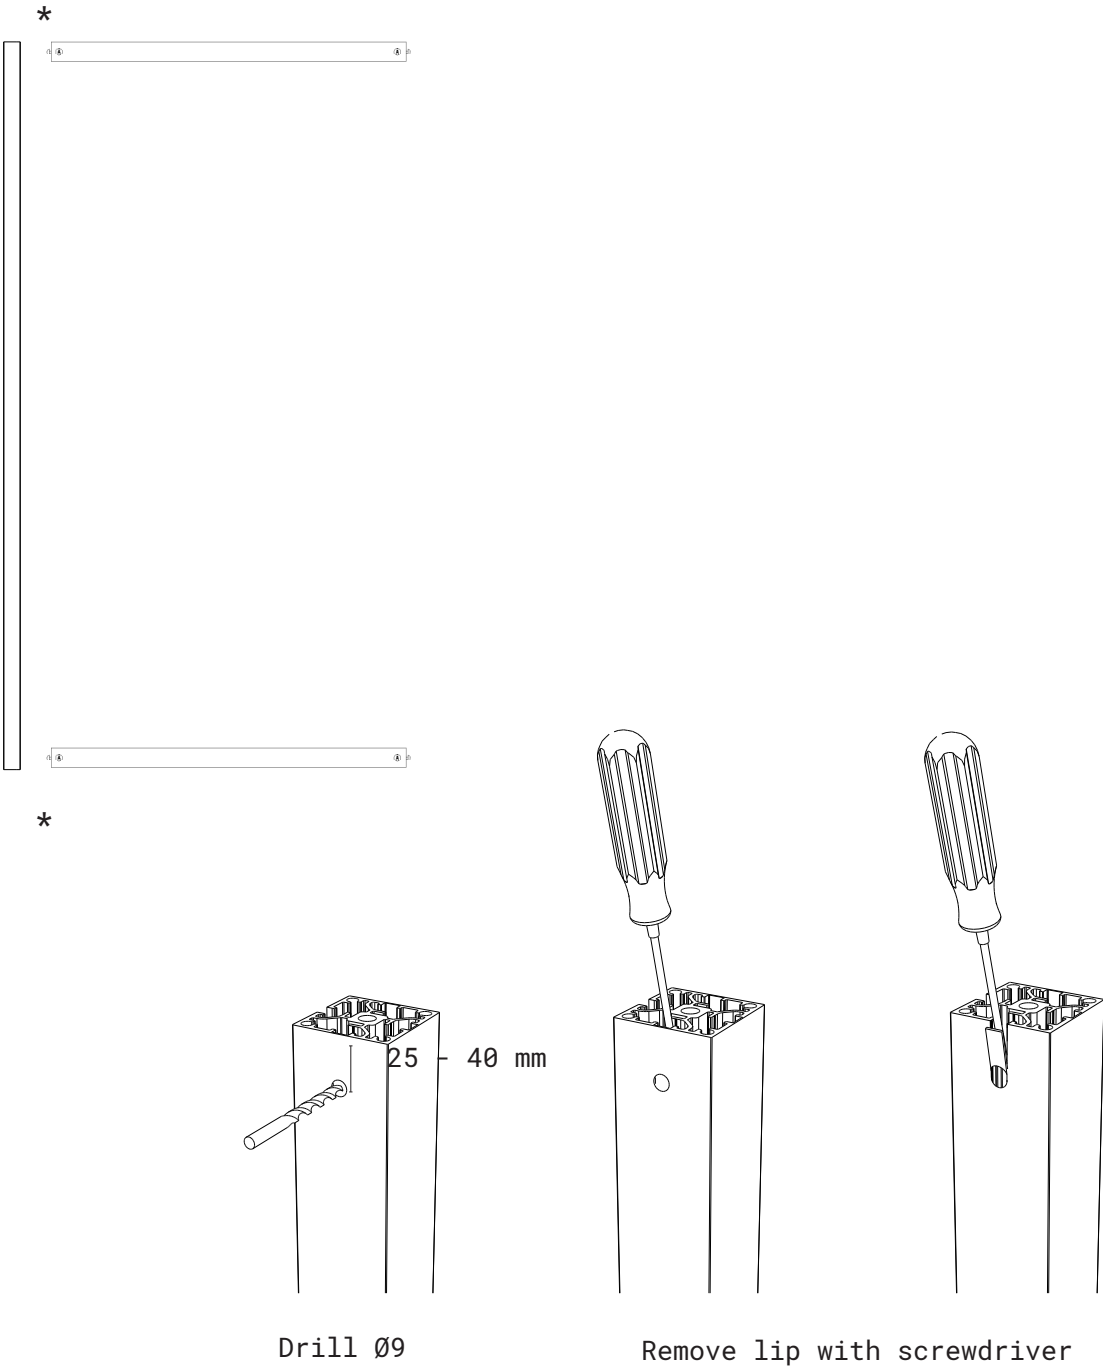



DOORBAR

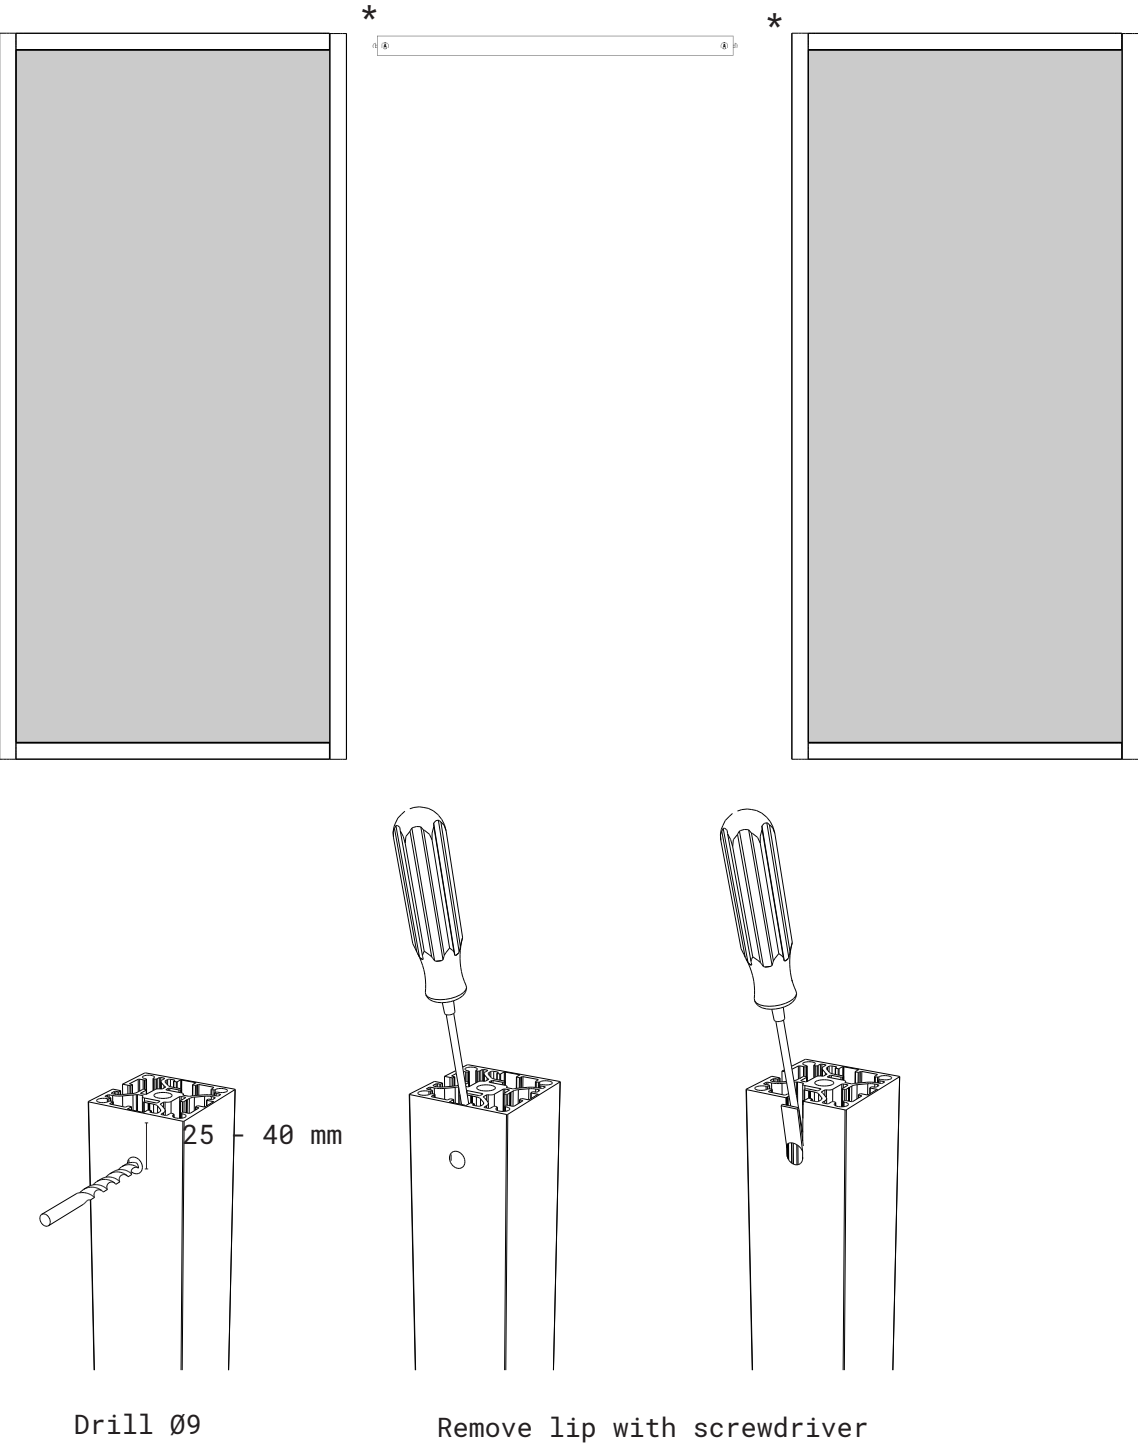


* ATTENTION! CF PREP ONLY TOP

02


DOORBAR

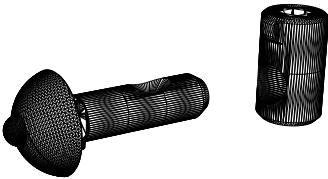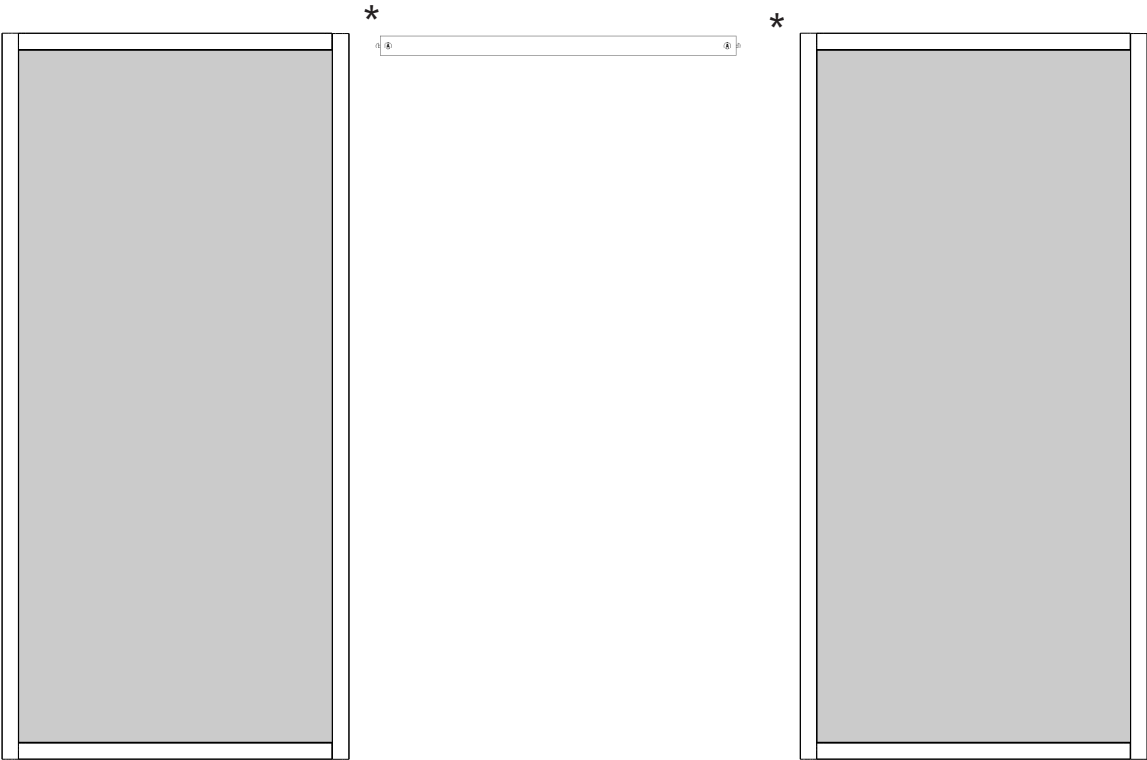

Split central fastener

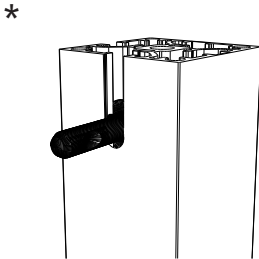

Install central fastener pen in top and place cylinder in receiving part with hole the screw pointing towards hole in pen

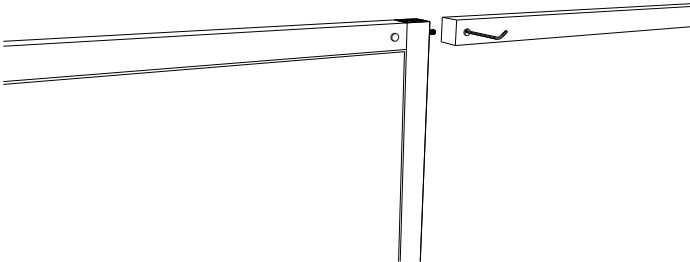

Tighten central fastener