



Installation manual for wire suspended screens


Supersonic Vertical Suspended Screen

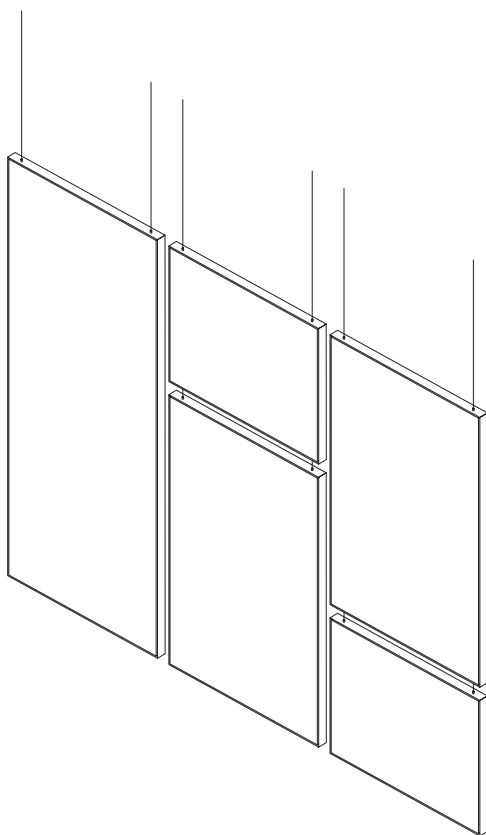

Box Content

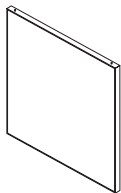

SCREENS
(WITH WIRE LOCKS)

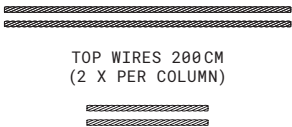

TOP WIRES 200CM
(2 X PER COLUMN)



CONNECTOR WIRES 20CM
(2 X FOR MIDDLE AND
BOTTOM SCREENS)



CEILING MOUNTS
1 X SET PER COLUMN

Optional*

*FLOOR ATTACHMENT KIT
(SEE STEP 05)



FLOOR WIRES 100CM
(2X PER COLUMN)




FLOOR MOUNTS
1 X SET PER COLUMN

*FOR SUSPENDED ACOUSTIC
CEILINGS INSERT:
(SEE STEP 04.4)




PLASTIC GROMMETS
(2 X PER COLUMN)


Needed in order to assemble

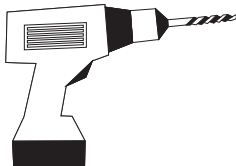

1 x POWER DRILL



1 x WIRE CUTTER



1 x LASER LEVEL
(SUGGESTED)




NB! Screws and wall plugs are not included.

Installation process

STEP 01

TOP WIRES AND CEILING MOUNTS *

For each top wire supplied, attach the ceiling mount as illustrated bellow

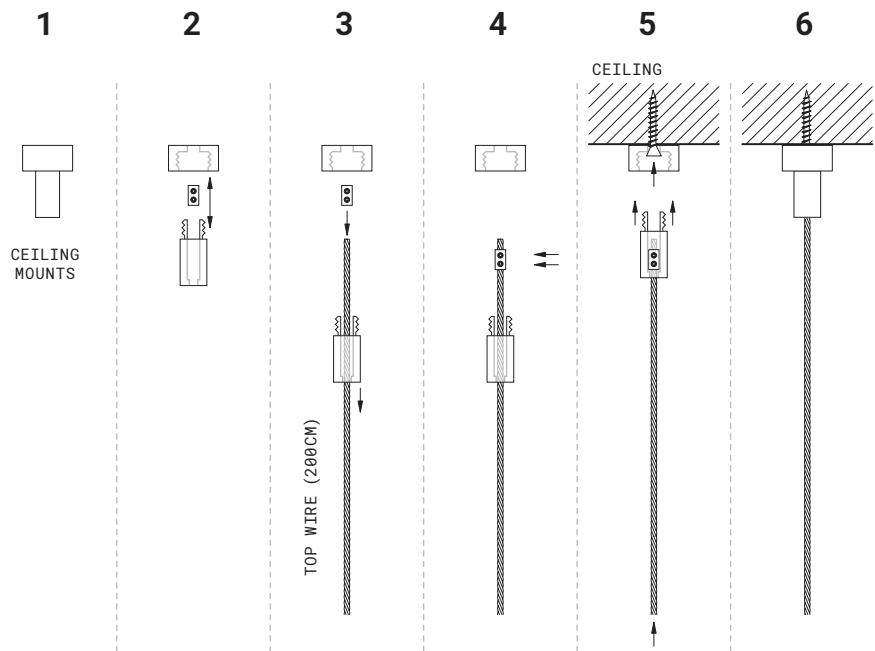


*For suspended acoustic ceilings, see page 5

Installation process

STEP 02

TOP WIRES INSTALLATION


- A) Drill holes in ceiling, add wall plugs
- B) For each column of suspended screens, the distance between the two holes is 50cm.
- C) The distance between the last hole for a given column and the first hole of the next column is 15cm
- D) Screw ceiling mounts with attached top wires into holes in ceiling.
- E) The distance between two columns of suspended screens is 5 cm.
- F) Insert the ends of the top wires into the wire locks on the screens. Depress the wire lock to release the wire again.
- G) The top wires can be trimmed to the desired length from ceiling to the top of the screens, plus an additional 5 cm, using wire cutters. Do this before inserting the wires into the wire locks.

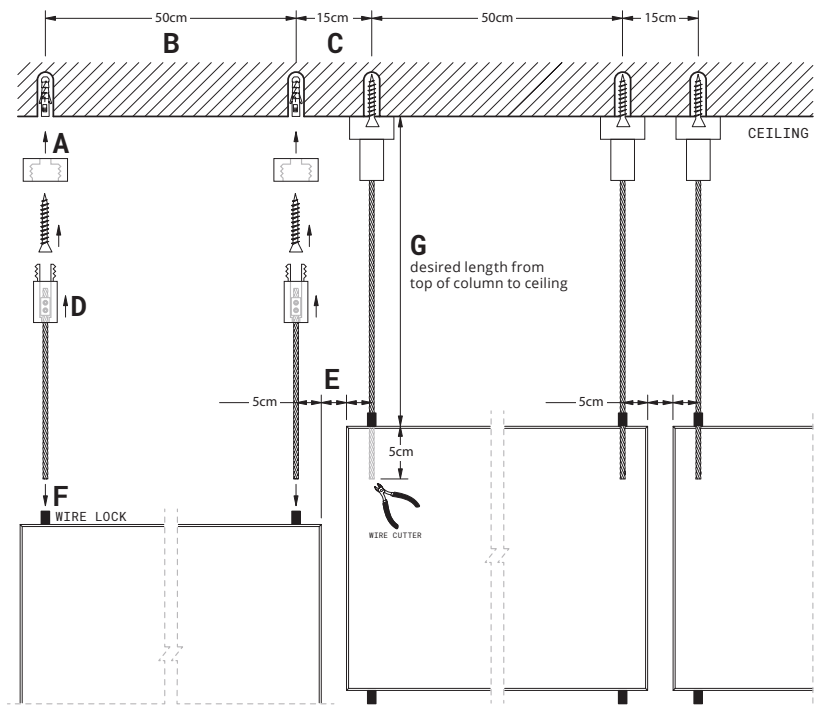

ADDITIONAL COLUMNS INSTALLATION

B) The distance between each column of suspended screens is, the same as the distance between each column


D) Optional: use a laser level to align the columns vertically and horizontally.

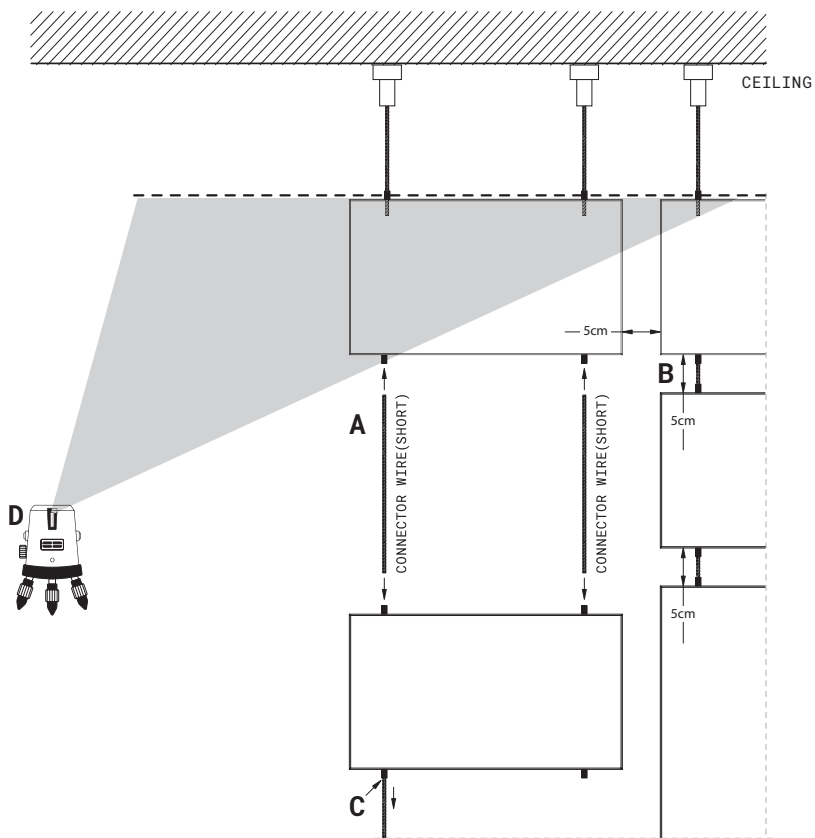

Installation process

STEP 04

*FOR SUSPENDED ACOUSTIC CEILINGS - ASSEMBLY TOP WIRES AND CEILING MOUNTS

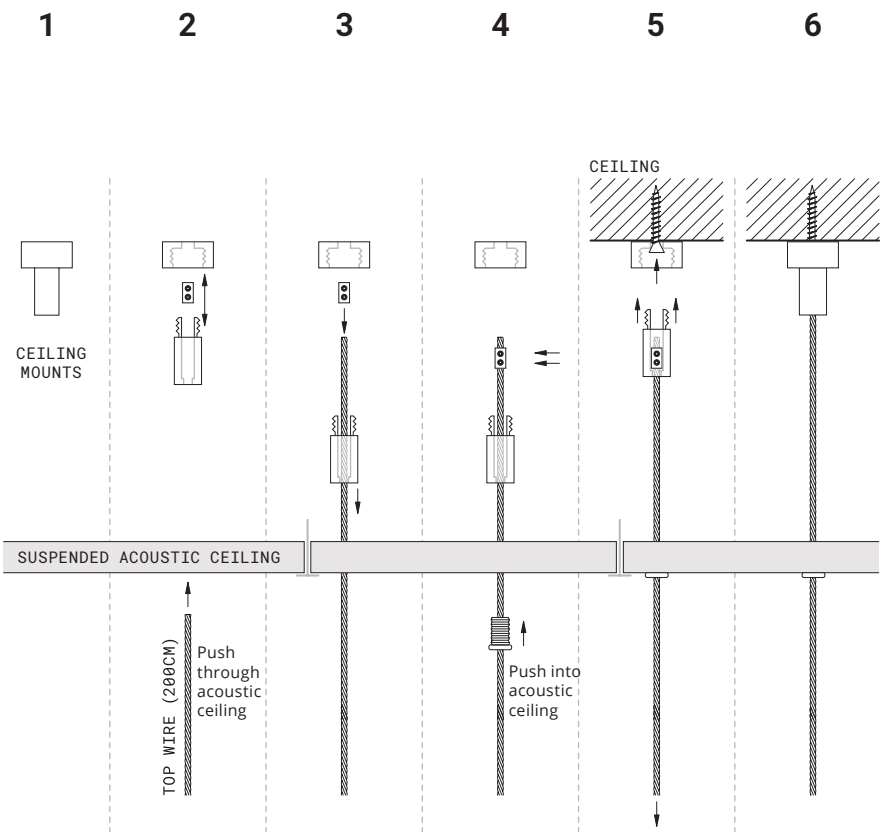


Installation process

STEP 05

*FLOOR ATTACHMENT (OPTIONAL)

Cut wires to length $X+5\text{cm}$

*To attach the wire to the floor mounts, refer to STEP 3

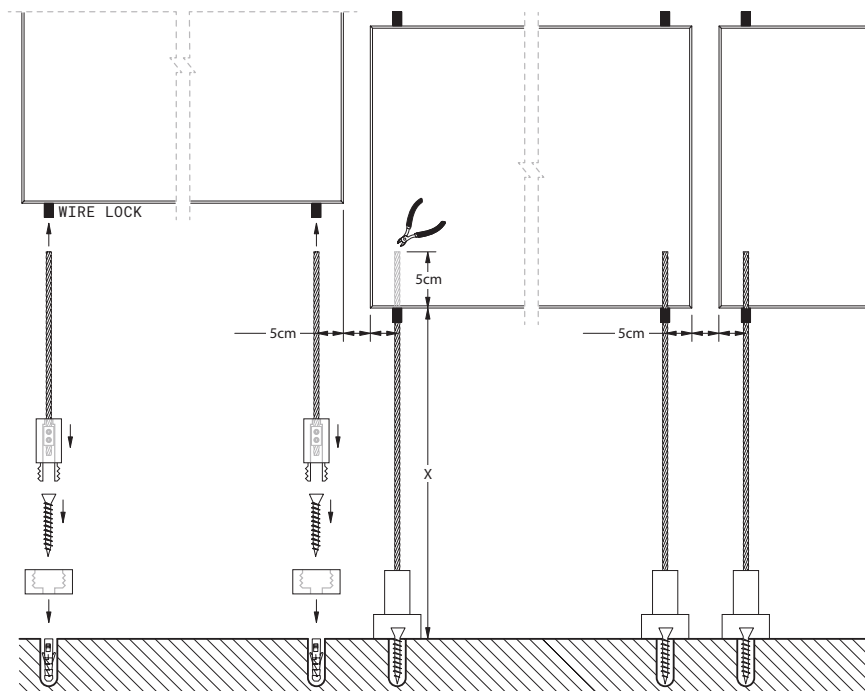

For more info:

<https://akuart.com/product/ss50-vertical-suspended-screen/>

Need support?

+45 27 50 82 90